


STEP ONE

Shade Slat Assembly

1

Assemble shade slats by first gluing the decorative end caps as shown, and then inserting the two slats into one joiner.

Push firmly until extrusion bottoms out inside joiner. **No screws are necessary.**

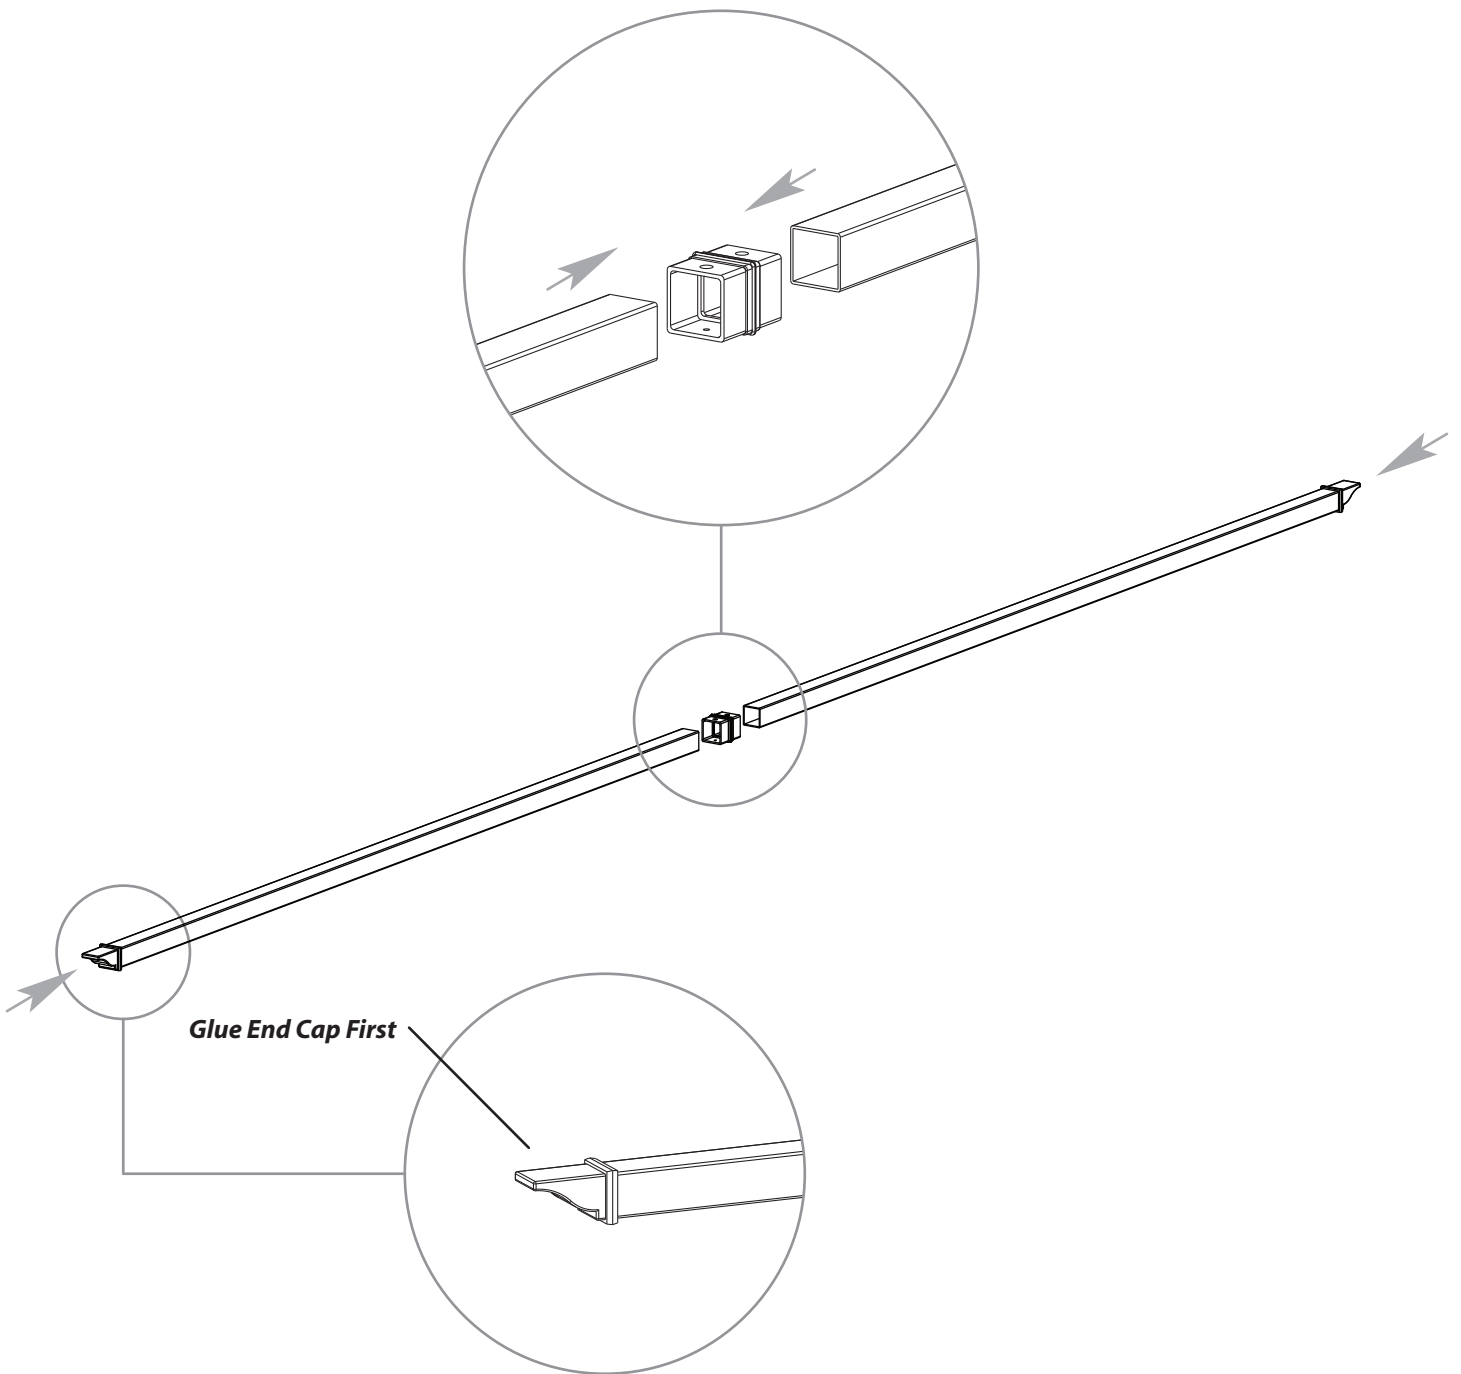

STEP TWO



Shade Slats Installation

1

Follow the pergola instructions until just before the shade slat installation.

At this point, 28 shade slats are assembled (i.e. 14 from the pergola kit and 14 from this additional shade slat kit). Install the first shade slat up against the columns and install the rest of the shade slats at 3 3/8in (8.7cm) spacing.

2

Proceed with the remainder of the steps, including fastening 3in screws through the shade slats and into the rafters.

Note: If the additional shade kit is installed retroactively, simply place one shade slat assembly in between two shade slats.

Only 13 shade slats will be used in this case.

